



INSTALLATION INSTRUCTIONS

Click-Clack Waste - CW8

Important

- We recommend that this product is installed by a qualified professional contractor. Such as a plumber who is certified by NVQ (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3.
- Please check this product immediately to ensure that it has not been damaged and is complete. Before installation, please make sure this product is the correct model and you have all the parts required for installation and using.
- Please flush the water system to ensure that no metal swarf, solder, and other impurities can enter the products.
- Please read these instructions carefully and keep it for future reference.

⚠ Do NOT overtighten the waste as this may cause long term damage to the bath. We recommend to use a torque wrench to tighten the waste by using a torque force between 25 Nm and 50Nm.

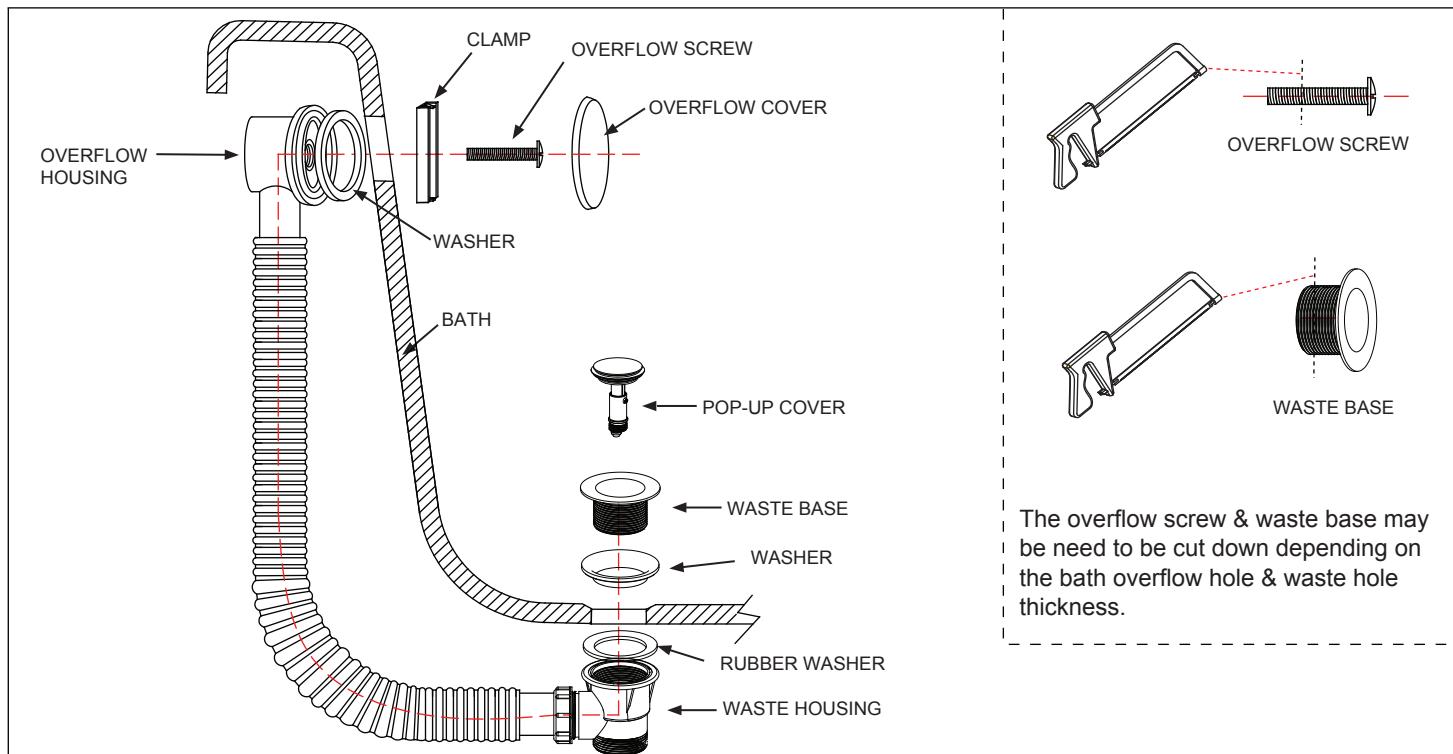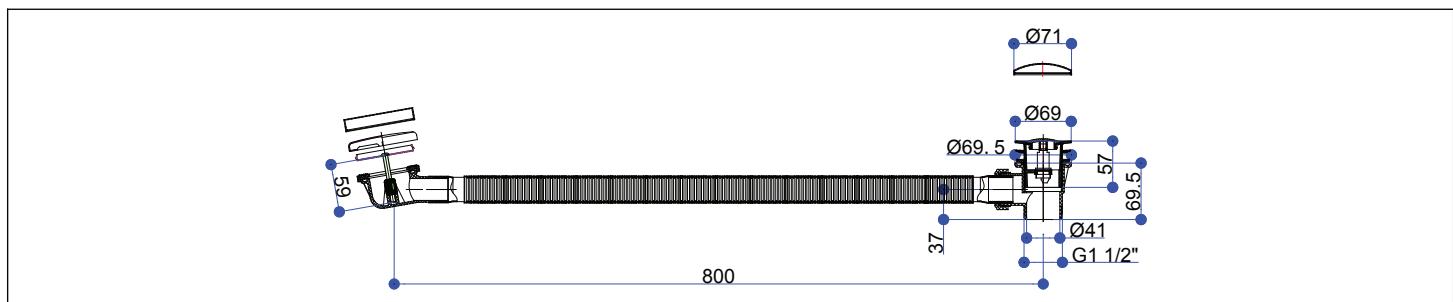

Installation

1. Put the waste base and washer into the bottom waste hole of bath. Place the rubber washer and waste housing onto the waste from the backside of bath in sequence. Tighten all the above elements together.
2. Hold overflow housing in position from the backside of the bath, screw the clamp into position using the overflow screw.
3. Finally attach on the overflow cover.

Maintenance

We do NOT recommend you use any household cleaners to clean the product. Because these cleaners change substance or formula too frequently. The product should be always cleaned only with soapy water and rinsed with clean water and dried with a soft cloth.