


INSTALLATION INSTRUCTIONS

Decorative Shrouds - W6


Important

- We recommend that this product is installed by a qualified professional contractor. Such as a plumber who is certified by NVQ (National Vocational Qualification) or SNVQ (Scottish National Vocational Qualification) Level 3.
- Please check this product immediately to ensure that it has not been damaged and is complete. Before installation, please make sure this product is the correct model and you have all the parts required for installation and using.
- Please read these instructions carefully and keep it for future reference.

Installation

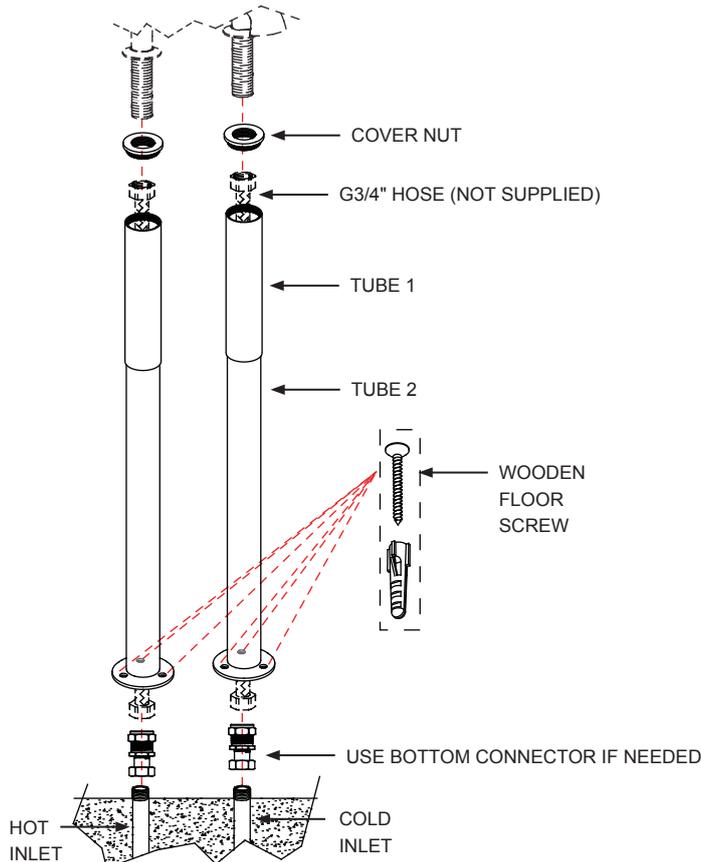

Dimension

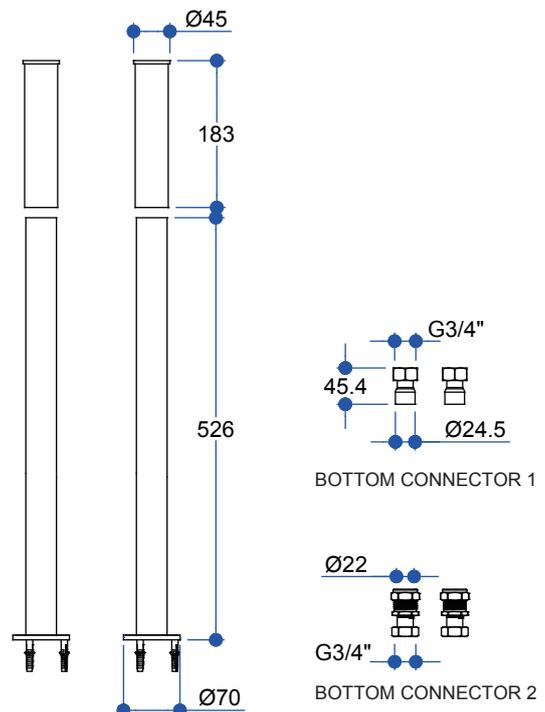

1. Prior to installation, please flush the water system to ensure that no metal swarf, solder and other impurities can enter the product.
2. Turn off the water supply at the isolating valves if fitted or the main stop cock prior to commencing work.
3. Build up two water inlet pipes from the ground. From the front view, hot water on the left and cold on the right.
4. Use the bottom connectors supplied if needed.

Note: Horizontal feed pipe under floor must have a degree of freedom to move up and down.

5. Place TUBE 2 over the water inlet pipes and mark on the floor the location of the fixing holes on the base plate. Drill and insert raw plugs where necessary.
6. Remove the Cover Nuts from TUBE 1.
7. Screw the cover nuts with flexi hoses (not supplied) onto the tap tails.
8. Slide TUBE 1 onto TUBE 2, and then slide the flexi hoses (not supplied) through the whole shrouds, ensuring that the taps are facing in the right direction.
9. Connect flexi hoses (not supplied) to the hot & cold inlets.
10. Push the Shrouds down into position and secure to the floor with the fixings provided.

Maintenance

We do NOT recommend you use any household cleaners to clean the product. Because these cleaners change substance or formula too frequently. The product should be always cleaned only with soapy water and rinsed with clean water and dried with a soft cloth.